

GO Industrial Pty Ltd t/as iFUEL® ABN 92 620 701 537 PO Box 1505 North Lakes QLD 4509 P: 07 3204 2240

W: www.ifuel.com.au E: sales@ifuel.com.au

Friday, February 22, 2019

TECHNICAL GUIDE MOUNTING OF IFUEL® LITE CONSOLE

- NEVER drill into the console
- ALWAYS mount using the mounting points located in the bottom of the console
- NOTE the following images





GO Industrial Pty Ltd t/as iFUEL® ABN 92 620 701 537 PO Box 1505 North Lakes QLD 4509 P: 07 3204 2240

W: www.ifuel.com.au E: sales@ifuel.com.au






Drill Guide

The diagram below shows the size of the holes in the bottom of the terminal.



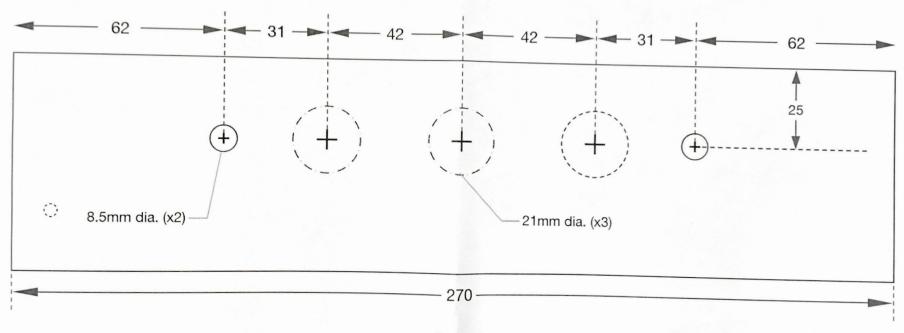

Front

iFUEL Lite V2 d. 11-12-2018

Please note: If you have downloaded this guide in pdf format please print at 100% to ensure correct dimensions. Check and compare measurements thoroughly before proceeding with installation.